




LALIZAS Fire Blanket in a PVC Case


Code	Dimension (cm)
70448	100x100
71298	120x180

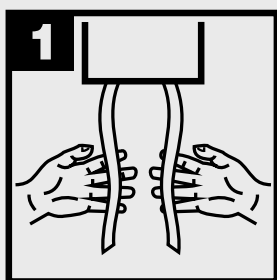

- (GR) ΤΡΑΒΗΤΕ ΤΑ ΚΟΡΔΟΝΙΑ ΚΑΙ ΒΓΑΛΤΕ ΤΗΝ ΚΟΥΒΕΡΤΑ
 (UK) PULL TAPES DOWNWARDS TO REMOVE BLANKET
 (ES) TIRAR DE LAS CINTAS PARA SACAR LA MANTA
 (NL) TREK BAND IN NEERWAARTSE RICHTING OM DEKEN TE VERWIJDEREN
 (IT) TIRARE LE CINGHIE VERSO IL BASSO PER ESTRARRE LA COPERTA
 (HR) POVUCITE TRAKE PREMA DOLJE KAKO BISTE IZVADILI DEKU
 (TR) BATTANİYEYİ ÇIKARMAK İÇİN BANTLARI AŞAĞI YÖNDE ÇEKİN
 (PT) PUXE A FITA PARA BAIXO PARA TIRAR O COBERTOR
 (RSA) TREK TAPE AFVARTS OM KOMBERS TE VERWYDER
 (FR) TIRER LES BANDES EN BAS POUR ENLEVER LA COUVERTURE



- (GR) ΚΑΛΥΨΤΕ ΠΛΗΡΩΣ ΤΗΝ ΚΑΙΟΜΕΝΗ ΕΠΙΦΑΝΕΙΑ
 (UK) COVER BURNING MATERIAL COMPLETELY
 (ES) CUBRIR EL FUEGO TOTALMENTE
 (NL) BEDEK BRANDEND MATERIAAL COMPLEET
 (IT) COPRIRE COMPLETAMENTE IL MATERIALE INCENDIATO
 (HR) U POTPUNOSTI PREKRIJTE OBJEKT ZAHVAČEN VATROM
 (TR) YANAN CİSMİ TAMAMEN KAPATIN
 (PT) CUBRA TOTALMENTE O MATERIAL INCENDIADO
 (RSA) PLAAS KOMBERS OOR BRANDENDE AREA.
 (FR) RECOUVRIR LE MATÉRIEL BRULANT COMPLÈTEMENT

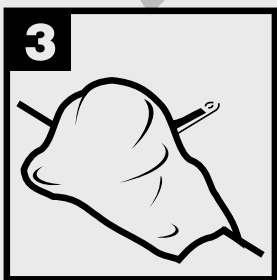

- (GR) ΚΛΕΙΣΤΕ ΤΗΝ ΠΗΓΗ ΘΕΡΜΟΤΗΤΑΣ ΚΑΙ ΑΦΗΣΤΕ ΝΑ ΚΡΥΩΣΕΙ
 (UK) SWITCH OFF HEAT SOURCE AND LEAVE COVERED UNTIL COOL
 (ES) APAGAR ARTEFACTO ORIGINANTE DEL CALOR, DEJAR CUBIERTO HASTA QUE ESTE FRIO
 (NL) SCHAKEL WARMTEBRON UIT, LAAT MET BRANDDEKEN BEDEKT TOT AFKOELING
 (IT) FINO A SPEGNERE LA FONTE DI CALORE, LASCIARE COPERTO L'INCENDIO FINO A QUANDO LA COPERTA NON SI E' RAFFREDDATA
 (HR) ISKLJUČITE IZVOR TOPLINE, OSTAVITE OBJEKT POKRIVENIM DOK SE NE OHLADI
 (TR) ISI KAYNAĞINI KAPATIN SOĞUYUNCAYA KADAR BEKLEYİN
 (PT) DESLIGUE A FONTE DE CALOR, MANTENHA O MATERIAL COBERTO ATÍ AO SEU COMPLETO ARREFECIMENTO
 (RSA) SKAKAL HUTTIE TOE VOER AF EN HOE BEDECK TOT VIR KOEL
 (FR) ÉTEINDRE LA SOURCE DE CHALEUR (GAZ OU ÉLECTRICITÉ) LAISSER COUVERT JUSQU'À CE QUE L'ENSEMBLE SOIT TOTALEMENT REFROIDI